

## ATTENTION

BEFORE MOUNTING THE ECU, TEMPORARILY CONNECT THE ECU CONNECTORS TO THE ECU, THE GLASS BREAKAGE SENSOR'S (MICROPHONE) CONNECTOR TO THE 2P CONNECTOR NEAR THE GEAR SHIFTER, AND THE NEGATIVE BATTERY CABLE TO THE BATTERY. SKIP TO THE "TEST THE SYSTEM" SECTION, AND PERFORM THE FUNCTION CHECK. COMPLETE THE INSTALLATION AFTER FINISHING THE FUNCTION CHECK.

### RS3000 ECU MOUNTING

(1) Peel the protective backing off one side of the butyl tape pad (provided), then affix the pad to the bottom of the ECU. Fig 40

(2) Plug the RS3000 harness' 4P and two 10P connectors into the ECU. Fig 41

(3) Peel the protective backing off the butyl tape pad affixed to the bottom of the ECU, place the ECU (connectors facing back) under the airbag ECU's harness, and press the ECU firmly into place. Fig 42

