

SYSTEM TRIGGERING/STARTER DISABLE TESTS

- 1) Roll down both windows, remove the ignition key, and exit the vehicle.
- 2) Close both doors and the hatch, verifying all are shut completely.
- 3) Press and release the Remote Control's **top** button to arm the system.
- 4) Reach inside, unlock, and open the driver's door; **the system is triggered**. Simultaneously:
 - A) The horn sounds in a unique pattern.
 - B) The tail and marker lights flash in the same pattern.
 - C) The interior lights flash or turn on.¹
 - D) The vehicle's "SECURITY" LED flashes in the same pattern as the horn and lights.
 - E) The vehicle's starter is disabled.

Note: For M/T vehicles, perform the next three steps while fully depressing the clutch pedal.

- 5) Insert the key into the ignition switch.
- 6) Turn the ignition key past "START" once: the starter will not crank.
- 7) Turn the key back to "ACC", then past "START" again. Simultaneously:
 - A) The system is disarmed.
 - B) The horn stops sounding.
 - C) The tail and marker lights stop flashing.
 - D) The interior lights stop being activated.
 - E) The vehicle's "SECURITY" LED stops flashing.
 - F) The starter cranks and starts the engine.
- 8) Check the passenger's door and the hatch (without performing the starter disable test).
- 9) Roll up both windows, exit the vehicle, and close all of the entry points.

GLASS BREAKAGE SENSOR SENSITIVITY CHECK

- 1) Press and release the Remote Control's **top** button again to arm the system.
- 2) Wait two seconds.

Note: When performing this test, the system's alarm performs differently. When tapping is initially detected, the horn will sound and the lights will flash only three times. If tapping is detected again within five seconds, the alarm will sound for approximately one minute.

Warning: Use caution when performing the next step. Do not tap the window glass with too much force, or the glass may crack or break. Use extra caution when the temperature is extremely cold.

- 3) With the tip of the ignition key (or striker tool), *softly* tap the center of the driver's door window glass.
 - A) If the alarm is triggered (horn sounds only three times), the sensitivity must be adjusted. Turn the Glass Breakage Sensor Controller's adjustment screw counterclockwise one notch, and repeat this step again.
- 4) If the alarm is not triggered, repeat the glass tapping with *moderate* force.
 - A) The alarm should sound when the glass is tapped with moderate force. If it does not sound, turn the Glass Breakage Sensor Controller's adjustment screw clockwise one notch, then repeat this step again.

COMPLETING THE INSTALLATION

- ◆ Place the Owner's Guide and Insurance Form in the glove box.
- ◆ Attach the Remote Controls to the vehicle's keys.
- ◆ Complete all of the steps listed in the vehicle function check sheet after reassembling the vehicle.

¹ The dome light will turn on only when it's switch is set to the "DOOR" position.