



- (3) Pull back the fender liner, and route the Piezo "Chirper" wires through the fender as shown. Fig 20

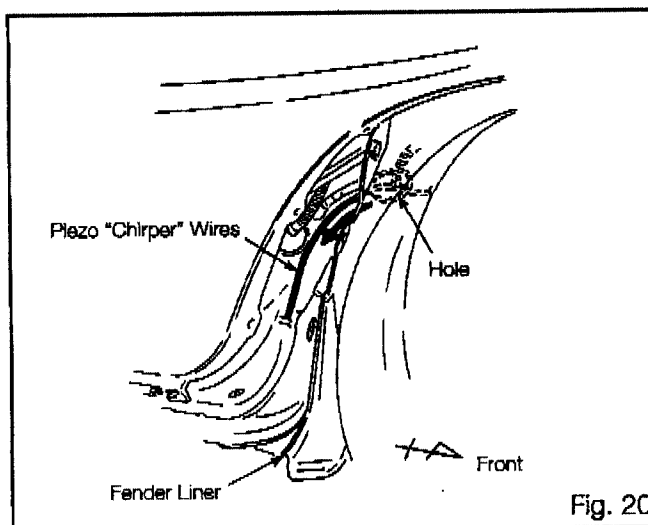

- (4) Locate the vehicle's wire harness grommet, and cut off the tip of the grommet's nipple as shown. Fig 21

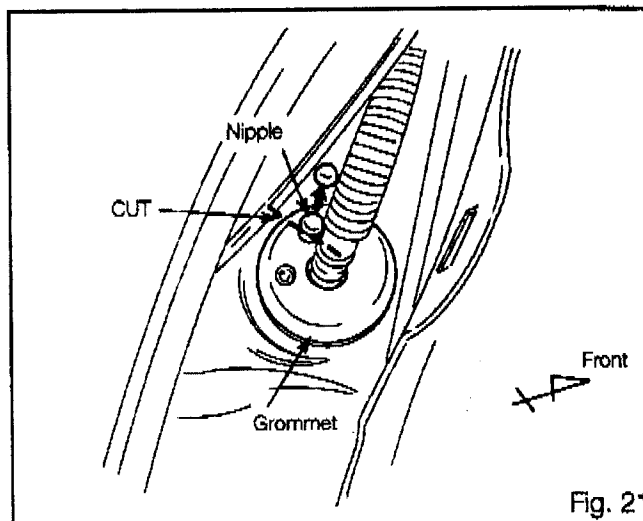

- (5) A) Route the entire length of the Piezo "Chirper" wires through the grommet into the passenger compartment, and secure them to the vehicle's wire harness with one medium wire tie as shown. Fig 22

- B) Wrap electrical tape around the grommet's nipple and the Piezo "Chirper" wires. Fig 22

