

- (6) Inside the passenger compartment, route the Piezo "Chirper" wires to the floor, and cut off the excess as shown. Fig 23

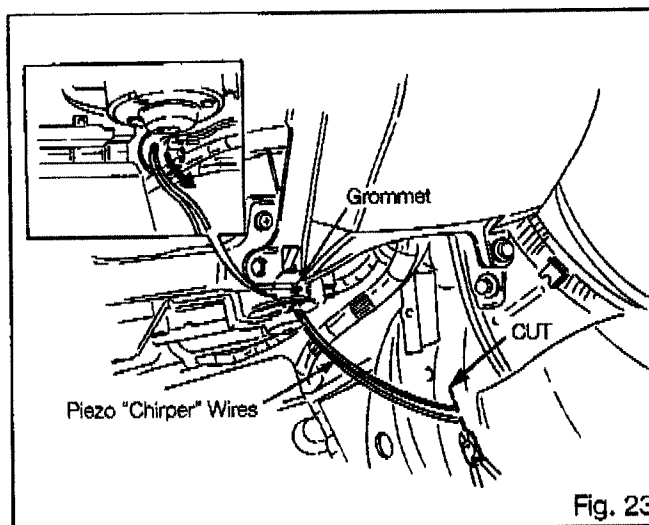


Fig. 23

### WIRE HARNESS INSTALLATION

- (1) A) Behind the dash on the passenger's side of the vehicle, unlock the clip securing the vehicle's wire harness as shown. Fig 24
- B) Locate and disconnect the vehicle wire harness' orange 9P and 25P connectors from the Door Lock Control/Theft Deterrent System ECU. Fig 24

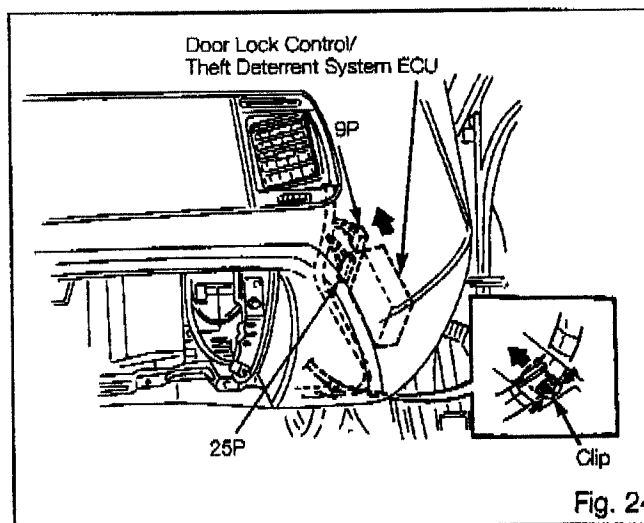


Fig. 24

- (2) A) Insert the RS3000 harness' orange 9P and 25P female (terminals) connectors into the Door Lock Control/Theft Deterrent System ECU. Fig 25
- B) Insert the vehicle wire harness' orange 9P and white 25P female (terminals) connectors into the RS3000 harness' orange 9P and white 25P male (terminals) connectors. Fig 25

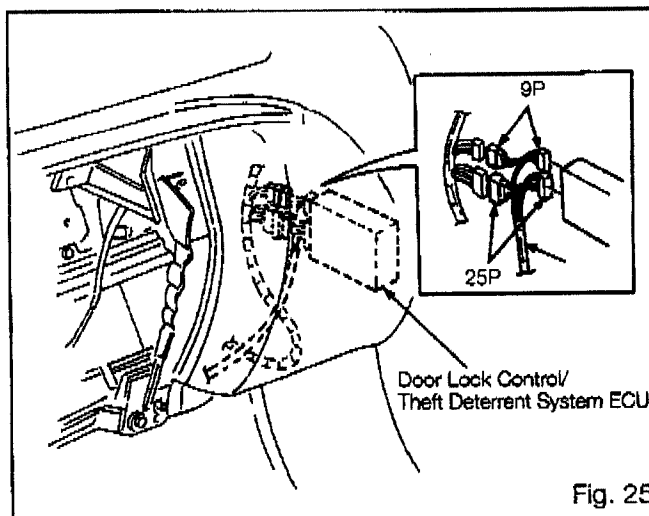


Fig. 25