

- (5) Route the RS3000 harness across the passenger's foot well area, then secure it to the vehicle's wire harness with two medium wire ties as shown. Fig 29

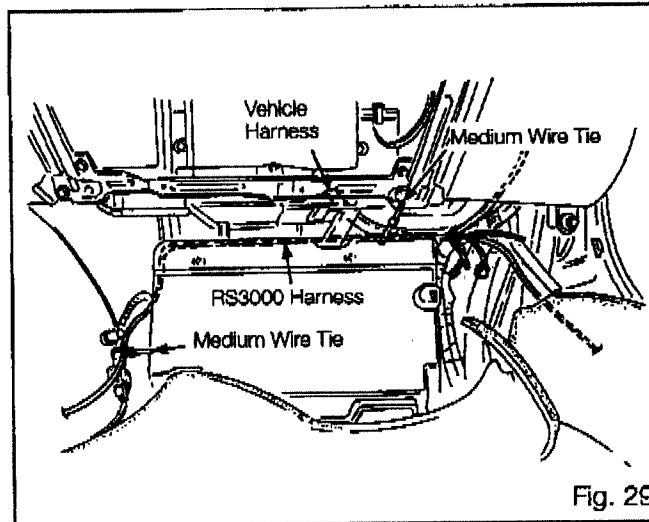


Fig. 29

- (6) A) In the passenger's cowl area, locate the RS3000 harness' RED wire and the Piezo "Chirper" RED wire. Fig 30
- B) Using a splicing connector, attach the wires to each other. Fig 30
- C) Locate the RS3000 harness' clear 6P connector and the Piezo "Chirper" BLACK wire. Fig 30
- D) Turn the connector so the wires face you and the tab is on top. Fig 30
- E) Locate the WHITE/BLACK wire in the bottom row, left corner. Using a splicing connector, attach the Piezo "Chirper" BLACK wire as shown. Fig 30

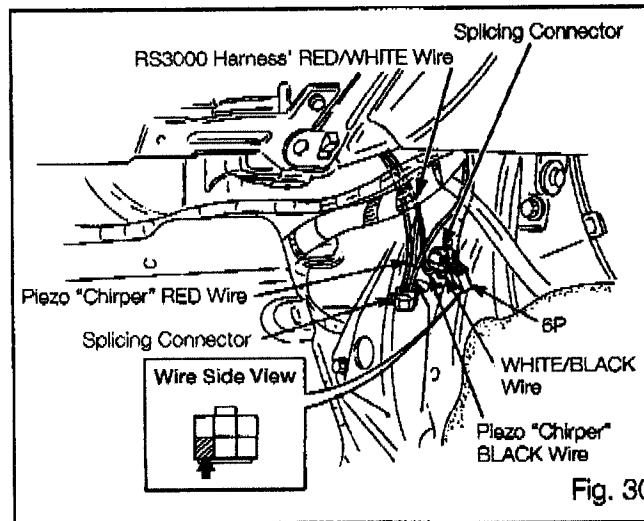


Fig. 30

- (7) A) Route the RS3000 harness back toward the center console area, and secure it to the vehicle wire harness' cover with two medium wire ties as shown. Fig 31
- B) Route the RS3000 harness under the edge of the instrument panel's center section as shown. Fig 31

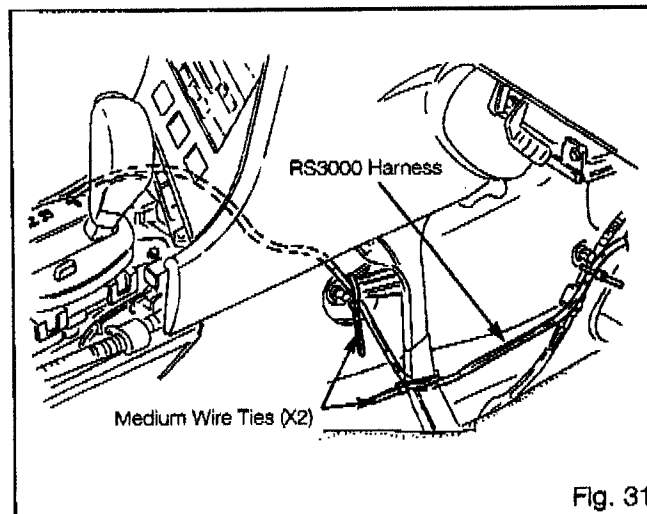


Fig. 31