


- (4) Plug in the K.E.S. harness' 14P connector into the ECU. Fig 34

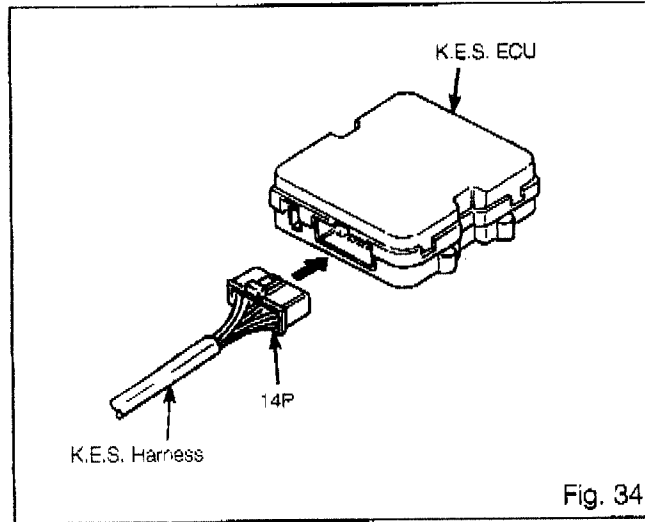

- (5) Secure the K.E.S. harness to the vehicle's wire harness with a medium wire tie as shown. Fig 35

